


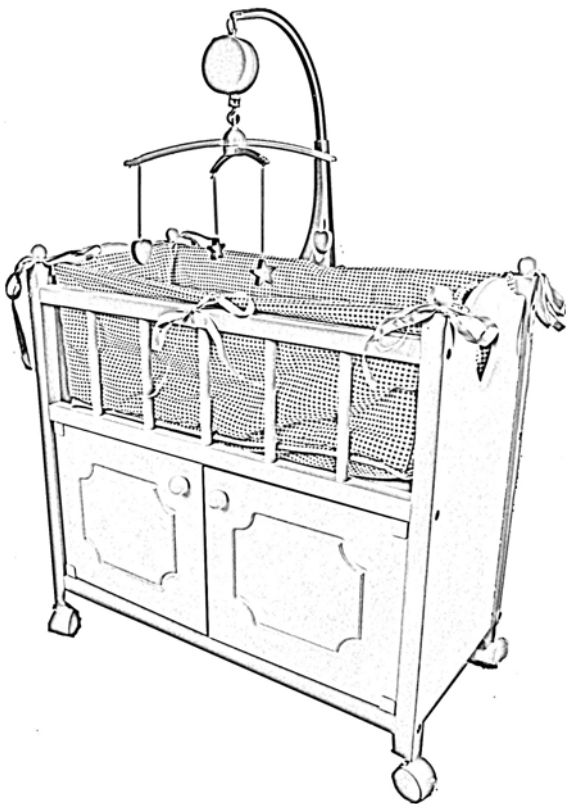

DOLL CRIB WITH CABINET, BEDDING, AND MOBILE

**Assembly Instructions. Adult Assembly
Required. Save these instructions for future use.
This item is a toy for dolls only.
For children ages (3) years and older.**



PRODUCT MODEL

NUMBERS:

01721 - White

01727 - Cherry

CARE INSTRUCTIONS: Wipe the doll crib and musical mobile clean with a damp cloth and mild soap as needed. The fabric parts are made with poly/cotton fabric. For longevity of the product, we recommend spot cleaning or gently hand washing as needed; however you can machine wash the fabric parts in cold water, gentle cycle and air dry or tumble dry on low if desired.

Visit us online at www.badgerbasket.com

Toll-Free Customer Service: 1-800-236-1310 (Monday to Thursday 7:30 AM-4:30 PM CST)

Web: <http://www.badgerbasket.com/parts> • **E-mail:** parts1@badgerbasket.com

Mail: PO Box 227, Edgar, WI 54426-0227 • **Phone:** 715-352-2311 • **Fax:** 715-352-3163



BEFORE YOU BEGIN ASSEMBLY:

Check all parts and hardware.

If anything is missing or not satisfactory,
please **DO NOT** call the store or return the product to them.

Contact Badger Basket for assistance.

Most problems are resolved without you needing to leave home.

When contacting us, please have this instruction manual, your
product model number, and your product version code ready.

For fastest service, go to

<http://www.badgerbasket.com/parts>

Your Product Version Code is: 4.0/0608/TG



WARNING - CAUTION

READ ALL INSTRUCTIONS before use of this product. Product and/or
Hardware may include small parts or screws with sharp points.

Choking Hazard! Keep unassembled parts out of the reach of small
children. Use only the parts and hardware provided by Badger Basket.
Keep instructions for future use. Do not use the product if it is damaged
or broken. Periodically inspect the product and retighten hardware if
needed. **This item is a toy for dolls only.** It is never to be used for real
children or pets. **For children ages three (3) years and older.**

PARTS AND HARDWARE:



TOOLS NEEDED:

Philips Screwdriver

A power screwdriver is helpful but be careful not to strip the screws or damage the product.



PARTS INCLUDED:

- (A) 2 - End Panels
- (B) 1 - Rear Side Panel
- (C) 1 - Front Side Panel w/Door Stop
- (D) 1 - Rear Bottom Rail w/Two Grooves
- (E) 2 - Bottom Platforms (notched corners)*
- (F) 1 - Back Panel*
- (G1) 1 - Left Door Panel
- (G2) 1 - Right Door Panel
- (H) 1 - Front Bottom Rail w/One Groove
- (I1) 4 - Caster Wheels
- (I2) 4 - 1¼" Bolts for Wheels
- (I3) 4 - Nuts for Wheels
- (J) 12 - 2" Screws
- (K) 1 - Lower Mobile Arm
- (L) 1 - Upper Mobile Arm
- (M) 1 - Mobile Music Box
- (N) 1 - Mobile Cross Arms
- (O) 4 - Hanging Mobile Shapes
- (P) 1 - Fabric Bumper/Liner
- (Q) 1 - Fabric Pillow
- (R) 1 - Fabric Blanket

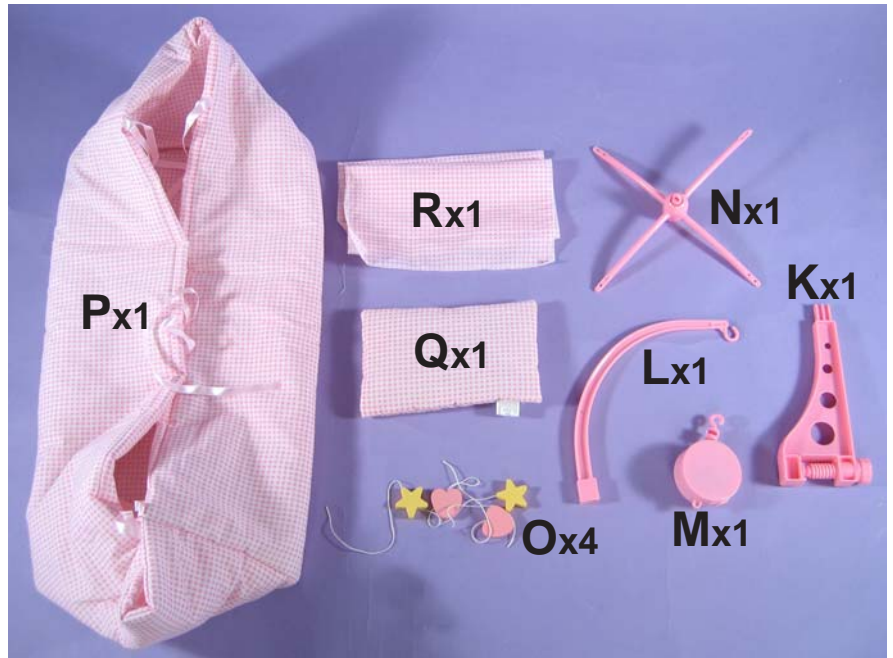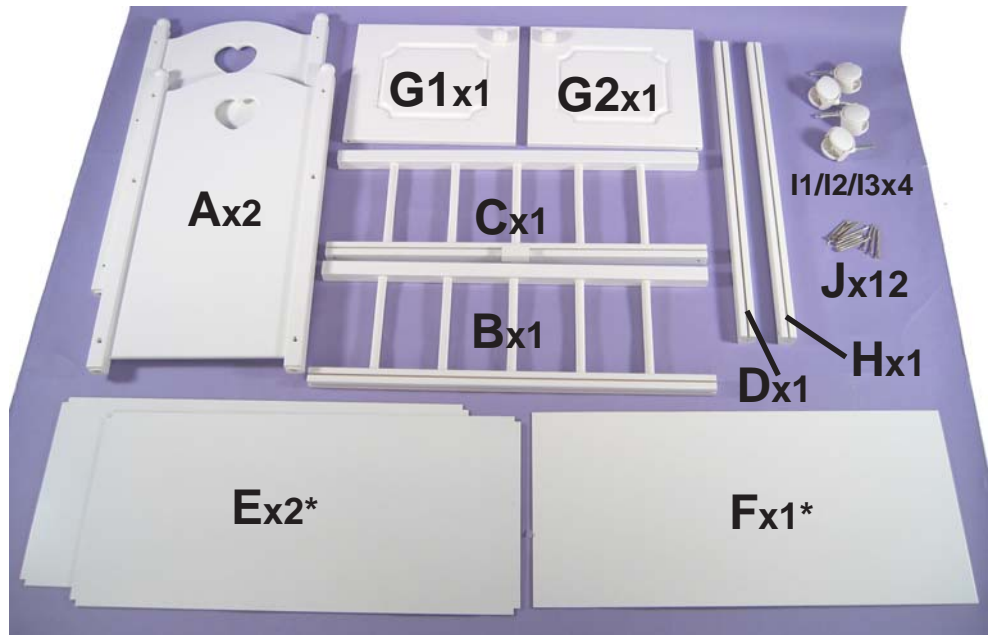

** NOTE: Any/all of these panels may have holes cut in them. The holes are required by current safety standards and are not a product defect.*

NOTE:
A WHITE DOLL CRIB IS SHOWN IN THE ASSEMBLY PHOTOS. ALL PARTS AND ASSEMBLY STEPS ARE THE SAME FOR THE CHERRY MODEL.

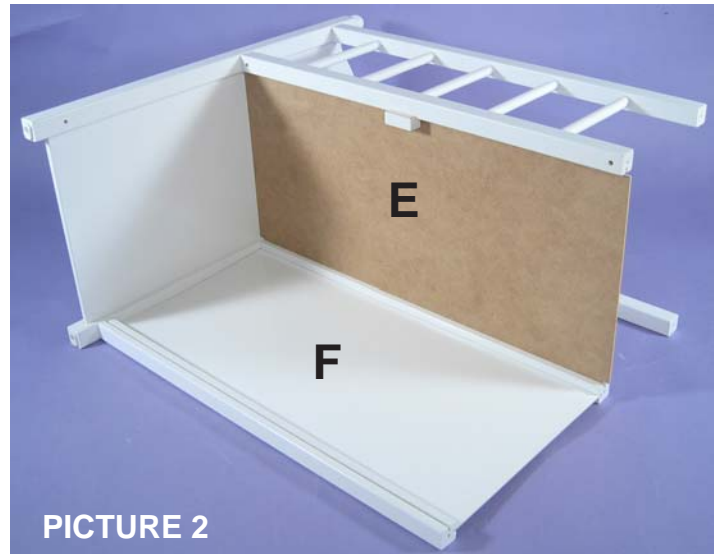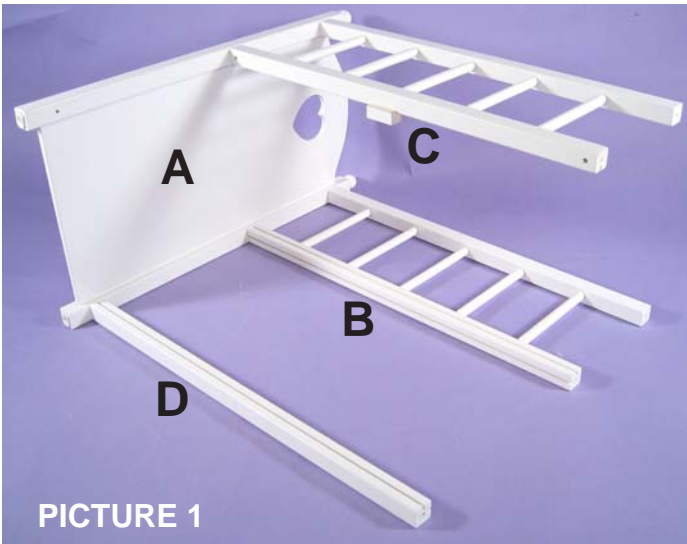


STEP 1 - PICTURE 1: Take ONE END PANEL (A) and attach the REAR SIDE PANEL (B) using TWO 2" SCREWS (J). One groove faces down and one faces in. Attach the FRONT SIDE PANEL (C) using TWO 2" SCREWS (J). The groove faces in and the holes for the hinge pins face down. Attach the REAR BOTTOM RAIL (D) using ONE 2" SCREW (J). One groove faces in and one faces up.

STEP 2 - PICTURE 2: Slide ONE BOTTOM PLATFORM (E) into the grooves on the SIDE PANELS (B, C) with the white side facing up. Slide the BACK PANEL (F) into the grooves on the REAR SIDE PANEL (B) and REAR BOTTOM RAIL (D) with the white side facing in.

STEP 3 - PICTURE 3: Take the DOOR PANELS (G1, G2) and insert the HINGE PINS on the top edges into the corresponding holes in the FRONT SIDE PANEL (C), and insert the HINGE PINS on the bottom edges into the holes on the FRONT BOTTOM RAIL (H). Attach the FRONT BOTTOM RAIL (H) to the END PANEL (A) using ONE 2" SCREW (J). The groove on the FRONT BOTTOM RAIL (H) should face in. Insert the second BOTTOM PLATFORM (E) into the grooves on the FRONT AND REAR BOTTOM RAILS (D, H).

STEP 4 - PICTURE 4: Attach the second END PANEL (A) to all of the side panels and rails using SIX 2" SCREWS (J).

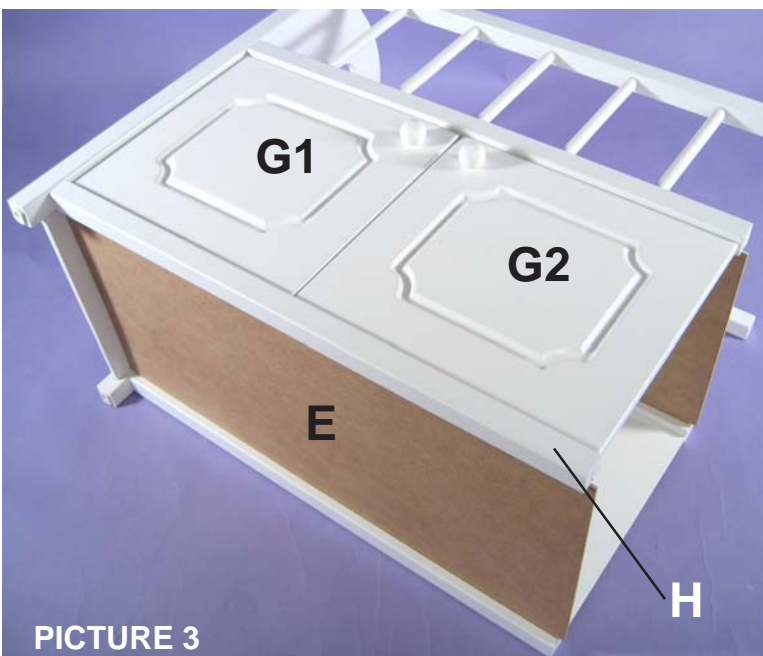

STEP 5 - PICTURE 5:

Attach the FOUR CASTER WHEELS (I1) to the legs of the TWO END PANELS (A) using ONE BOLT (I2) and ONE NUT (I3) for each wheel.

STEP 6 - PICTURE 6:

Attach the LOWER MOBILE ARM (K) to one of the SIDE PANELS (B or C, either one) by loosening and tightening the screw post. Overtightening may damage the product.

STEP 7 - PICTURE 7:

Snap the UPPER MOBILE ARM (L) to the LOWER MOBILE ARM (K). Hang the MUSIC BOX (M) on the UPPER MOBILE ARM (L).

Tie the FOUR HANGING MOBILE SHAPES (O) to the ends of the MOBILE CROSS ARMS (N), selecting the length you prefer. You can snip off the extra length of the strings with scissors.

Hang the MOBILE CROSS ARMS (N) on the MUSIC BOX (M).

To activate the mobile, wind it up using the dial on the MUSIC BOX (M) and slide the switch to the ON position. The music will play while the mobile arms slowly rotate. Stop the music and rotation by sliding the switch to the OFF position. The music box is powered by winding it up. It does not require any batteries! NOTE: Your mobile may vary slightly from shown.

STEP 7 - PICTURE 7:

Insert the FABRIC BUMPER/LINER (P) into the doll crib and smooth it down along the sides and bottom. Tie the ribbons to the corners and side panels.

The FABRIC PILLOW (Q) and BLANKET (R) add to the fun!

PICTURE 5



PICTURE 6



PICTURE 7