



DOLL CRIB WITH CABINET, BEDDING, AND MOBILE

Assembly Instructions. Adult Assembly Required. Save these instructions for future use. This item is a toy for dolls only. For children ages (3) years and older.



**PRODUCT MODEL
NUMBER:**
01721

Visit us online at www.badgerbasket.com

Toll-Free Customer Service: 1-800-236-1310 (Monday to Thursday 7:30 AM-4:30 PM CST)

Web: <http://www.badgerbasket.com/parts> • **E-mail:** parts@badgerbasket.com

PLANT AND GENERAL OFFICE: PO Box 227, Edgar, WI 54426-0227 • **Phone:** 715-352-2311 • **Fax:** 715-352-3163

CORPORATE OFFICE: 111 Lions Dr., Suite 220, Barrington, IL 60010

PARTS AND HARDWARE:

BEFORE YOU BEGIN ASSEMBLY:



Check all parts and hardware listed. If anything is missing, please **DO NOT** call the store or return the product to them. Contact us for assistance. Most problems are resolved without you needing to leave home. When emailing or calling us, please have this instruction manual and your product model number ready. For fastest service, go to <http://www.badgerbasket.com/parts>

TOOLS NEEDED:



Philips Screwdriver



A power screwdriver is helpful but be careful not to strip the screws or damage the product.

PARTS INCLUDED:

- (A) 2 - End Panels
- (B) 1 - Rear Side Panel
- (C) 1 - Front Side Panel w/Door Stop
- (D) 1 - Rear Bottom Rail w/Two Grooves
- (E) 2 - Bottom Platforms (notched corners)*
- (F) 1 - Back Panel*
- (G1) 1 - Left Door Panel
- (G2) 1 - Right Door Panel
- (H) 1 - Front Bottom Rail w/One Groove
- (I) 4 - Caster Wheels
- (J) 12 - 2" Screws
- (K) 1 - Lower Mobile Arm
- (L) 1 - Upper Mobile Arm
- (M) 1 - Mobile Music Box
- (N) 1 - Mobile Cross Arms
- (O) 4 - Hanging Mobile Shapes
- (P) 1 - Fabric Bumper/Liner
- (Q) 1 - Fabric Pillow
- (R) 1 - Fabric Blanket

* NOTE: Any/all of these panels may have holes cut in them. The holes are required by current safety standards and are not a product defect.

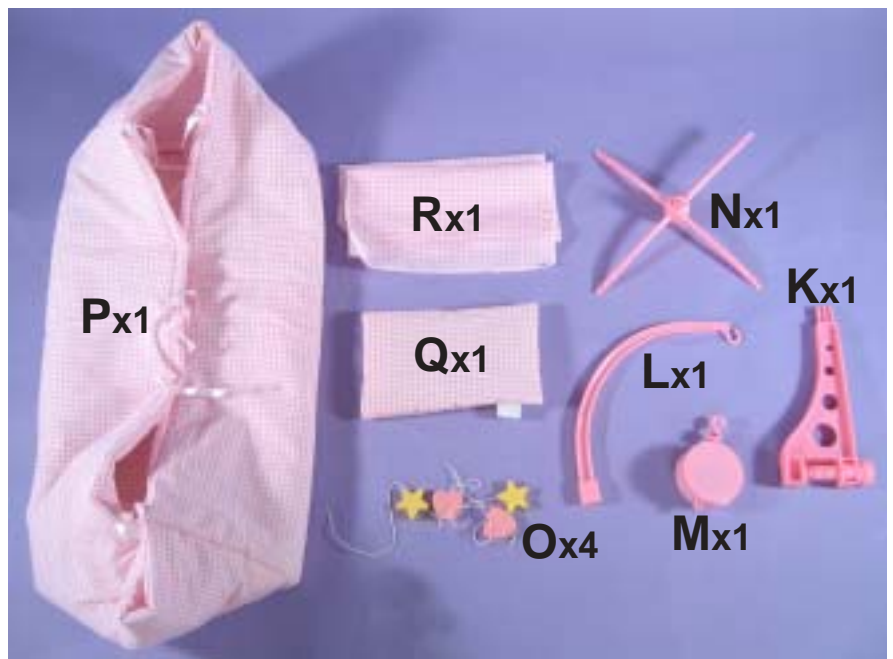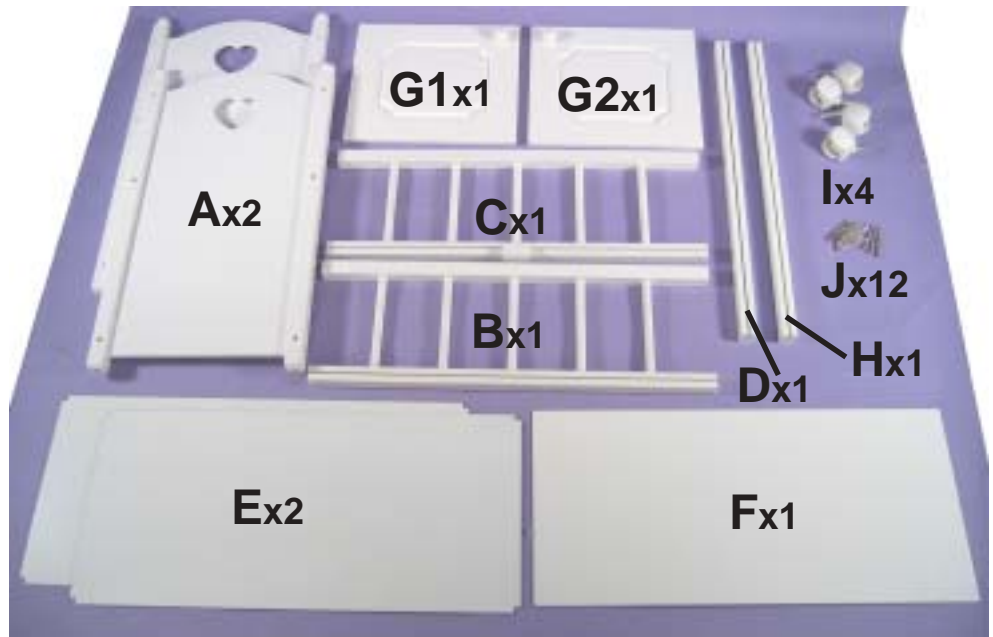

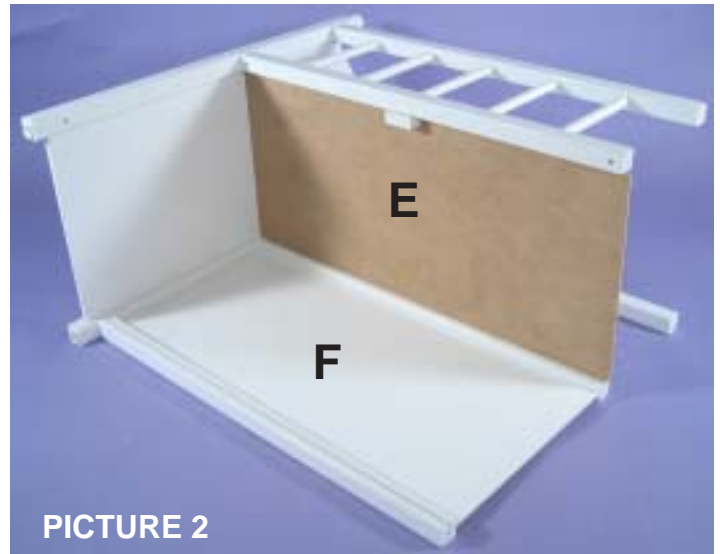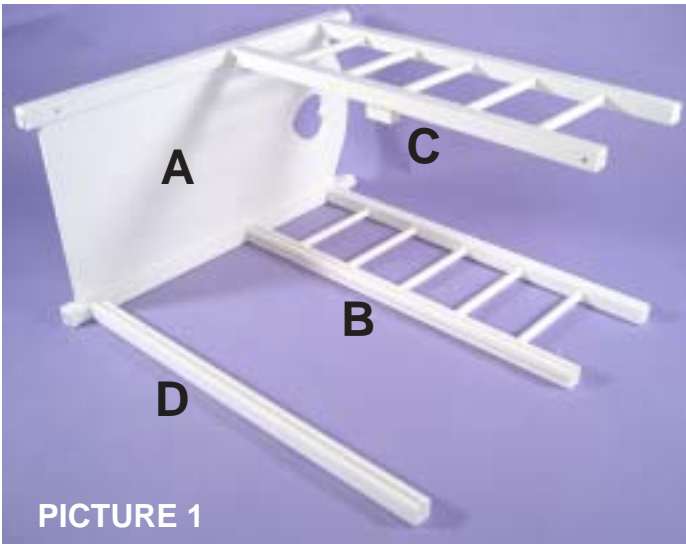


STEP 1 - PICTURE 1: Take ONE END PANEL (A) and attach the REAR SIDE PANEL (B) using TWO 2" SCREWS (J). One groove faces down and one faces in. Attach the FRONT SIDE PANEL (C) using TWO 2" SCREWS (J). The groove faces in and the holes for the hinge pins face down. Attach the REAR BOTTOM RAIL (D) using ONE 2" SCREW (J). One groove faces in and one faces up.

STEP 2 - PICTURE 2: Slide ONE BOTTOM PLATFORM (E) into the grooves on the SIDE PANELS (B, C) with the white side facing up. Slide the BACK PANEL (F) into the grooves on the REAR SIDE PANEL (B) and REAR BOTTOM RAIL (D) with the white side facing in.

STEP 3 - PICTURE 3: Take the DOOR PANELS (G1, G2) and insert the HINGE PINS on the top edges into the corresponding holes in the FRONT SIDE PANEL (C), and insert the HINGE PINS on the bottom edges into the holes on the FRONT BOTTOM RAIL (H). Attach the FRONT BOTTOM RAIL (H) to the END PANEL (A) using ONE 2" SCREW (J). The groove on the FRONT BOTTOM RAIL (H) should face in. Insert the second BOTTOM PLATFORM (E) into the grooves on the FRONT AND REAR BOTTOM RAILS (D, H).

STEP 4 - PICTURE 4: Attach the second END PANEL (A) to all of the side panels and rails using SIX 2" SCREWS (J). Stand up the doll crib and insert the FOUR CASTER WHEELS (I) into the holes on the bottom of the TWO END PANELS (A). Press each corner of the crib and the wheels against the floor (gently but firmly) to snap the wheels into place permanently. Or turn the crib upside down, insert the wheels, and gently tap into place with a hammer.

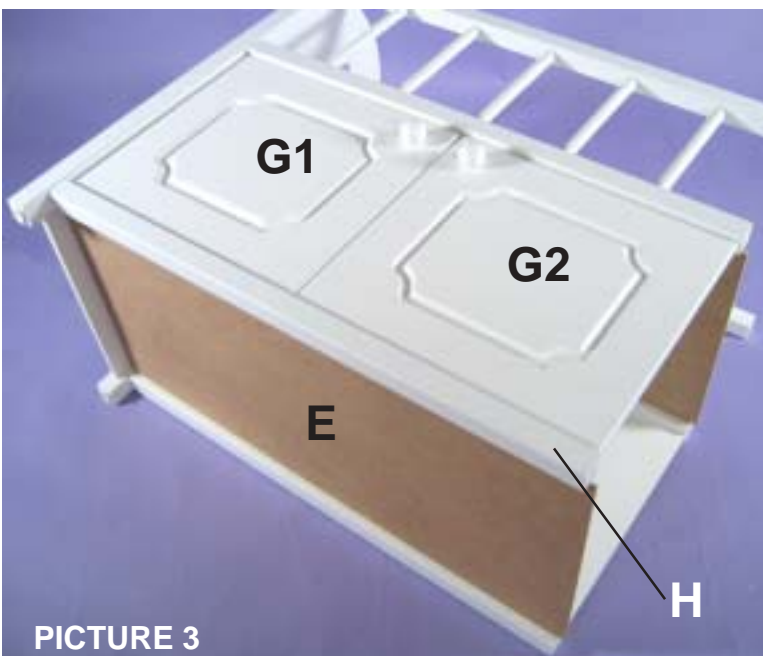

PICTURE 5



STEP 5 - PICTURES 5 AND 6: Attach the LOWER MOBILE ARM (K) to one of the SIDE PANELS (B or C, either one) by loosening the screw post, positioning the clamp on the rail, and tightening the screw post. Don't overtighten or you may damage the product.

Snap the UPPER MOBILE ARM (L) to the LOWER MOBILE ARM (K). Hang the MUSIC BOX (M) on the UPPER MOBILE ARM (L).

Attach the FOUR HANGING MOBILE SHAPES (O) to the ends of the MOBILE CROSS ARMS (N) by inserting the strings through the holes and tying knots in the string after selecting the length you prefer. You can snip off the extra length of the strings with scissors.

Hang the MOBILE CROSS ARMS (N) on the MUSIC BOX (M).

To activate the mobile, wind it up using the dial on the MUSIC BOX (M) and slide the switch to the ON position. The music will play while the mobile arms slowly rotate. Stop the music and rotation by sliding the switch to the OFF position. The music box is powered by winding it up. It does not require any batteries!
NOTE: Your mobile may vary slightly from shown.

STEP 6 - PICTURE 6: Insert the FABRIC BUMPER/LINER (P) into the doll crib and smooth it down along the sides and bottom. Tie the ribbons to the corners and side panels. The FABRIC PILLOW (Q) and BLANKET (R) add to the fun!



WARNING !! CHOKING HAZARD! SMALL PARTS!

Not for children under three (3) years of age. Please make sure children know that this furniture is for dolls and stuffed animals only. **It is not to be used with real infants or with pets. Children should NEVER attempt to sit or stand on the crib.**



PICTURE 6

CARE INSTRUCTIONS: Wipe the doll crib and musical mobile clean with a damp cloth and mild soap as needed. The fabric parts are made with poly/cotton fabric. For longevity of the product, we recommend spot cleaning or gently hand washing as needed; however you can machine wash the fabric parts in cold water, gentle cycle and air dry or tumble dry on low if desired.