



ASSEMBLY INSTRUCTIONS

Adult Assembly Required.
 Save these instructions for future use.
 This item is a toy for dolls only.
 For children ages three (3) years and older.

MODEL #: 01723
NAME: Canopy Doll Crib

TOOLS NEEDED: Phillips Screwdriver
(power driver is helpful but be careful not to damage the product)



BEFORE YOU BEGIN ASSEMBLY:

Ensure that all the parts and hardware listed are included.
 If anything is missing, please do not call or return the product to the store.
 Call or e-mail us for assistance.

PARTS INCLUDED:

- (A) 2 - End Panels
- (B) 2 - Bottom Rails
- (C) 2 - Side Rails
- (D) 12 - Long Bolts
- (E) 2 - Bottom Panels
- (F) 4 - Corner Posts
- (G) 2 - Metal Bars
- (H) 4 - Medium Bolts
- (I) 1 - Eye Hook
- (J) 1 - Top Rail
- (K) 2 - Short Bolts
- (L) 1 - Mobile Arms
- (M) 4 - Shapes
- (N) 1 - Music Box
- (O) 2 - Baskets
- (P) 2 - Basket Bottoms
- (Q) 1 - Liner
- (R) 1 - Canopy
- (S) 1 - Pillow
- (T) 1 - Blanket




CARE INSTRUCTIONS:

Wood parts can be wiped clean with a damp cloth. The fabric parts are poly/cotton. For longevity of the product we recommend hand washing and air dry. If desired, you can machine wash the bedding in cold water on gentle cycle, and air dry or tumble dry low or no heat. Iron on the lowest setting for poly/cotton.



Please make sure children know that this furniture is for dolls and stuffed animals only. **Children should NEVER attempt to sit or stand on it. It is NEVER to be used with real infants or pets.**

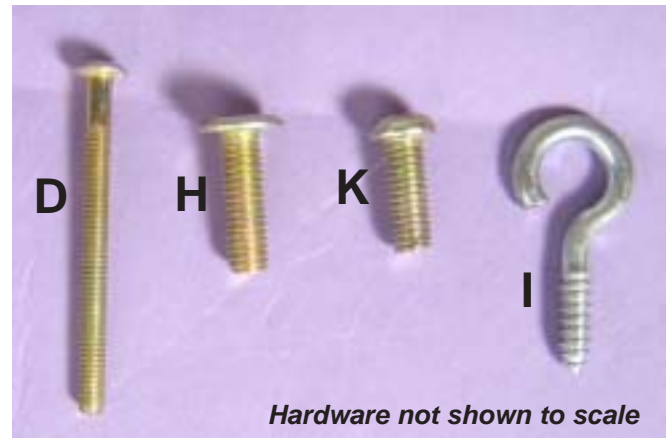


Hardware not shown to scale

Visit us online at www.badgerbasket.com


Toll-Free Customer Service: 1-800-236-1310 (Mon-Thurs 7:30 AM-4:30 PM CST), parts@badgerbasket.com

PLANT AND GENERAL OFFICE: PO Box 227, Edgar, WI 54426-0227 715-352-2311 Fax: 715-352-3163

CORPORATE OFFICE: 111 Lions Dr., Suite 220, Barrington, IL 60010

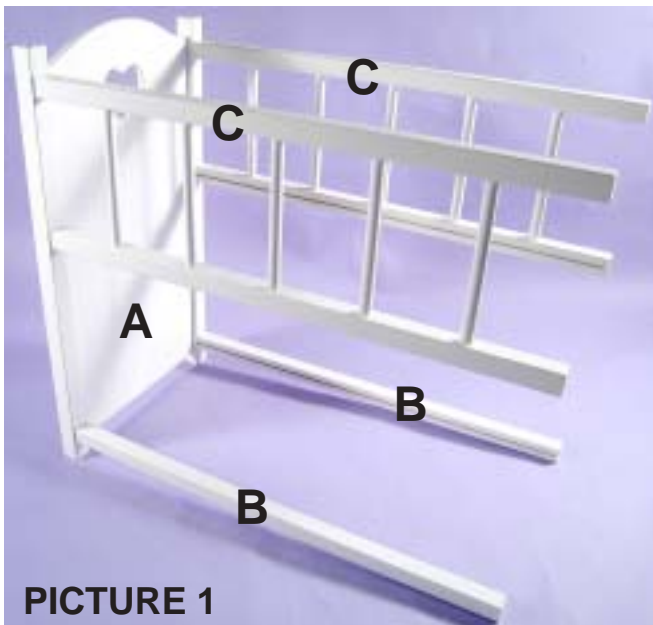

PICTURE 1

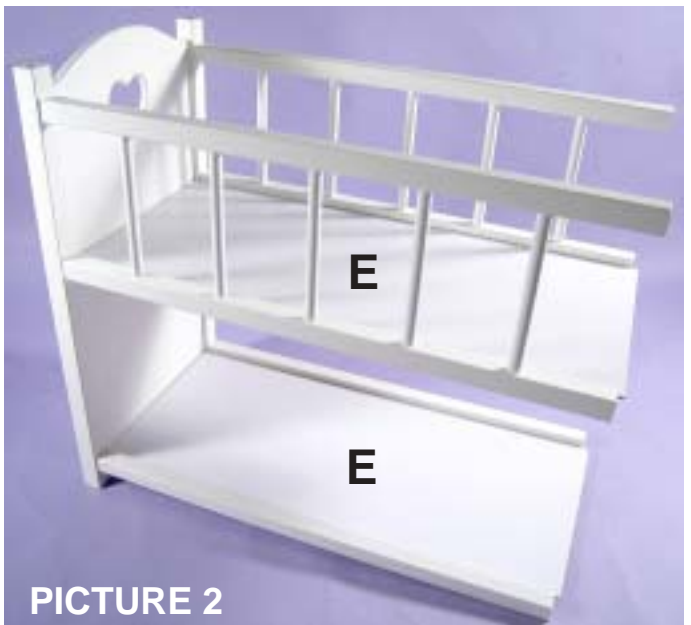

PICTURE 2

NOTE: The countersunk holes on the END PANELS (A) face out so the heads of the screws will be flush with the surface upon assembly.

STEP 1: See PICTURE 1. Take ONE END PANEL (A) and attach the TWO BOTTOM RAILS (B) using TWO LONG BOLTS (D) (grooves face in). Attach the TWO SIDE RAILS (C) to the end panel using FOUR LONG BOLTS (D) (grooves face in).

STEP 2: See PICTURE 2. Slide the BOTTOM PANELS (E) into the grooves on the RAILS (B, C) with the white sides facing up.


STEP 3: See PICTURE 3. Attach the second END PANEL (A) to the RAILS (B, C) using SIX LONG BOLTS (D).

STEP 4: See PICTURE 4. Screw one CORNER POST (F) onto each corner of the END PANELS (A). Position the holes on the corner posts facing in to the long sides of the crib.


STEP 5: See PICTURE 5. Attach the METAL BARS (G) to the INSIDE of the CORNER POSTS (F) using FOUR MEDIUM BOLTS (H).



PICTURE 3

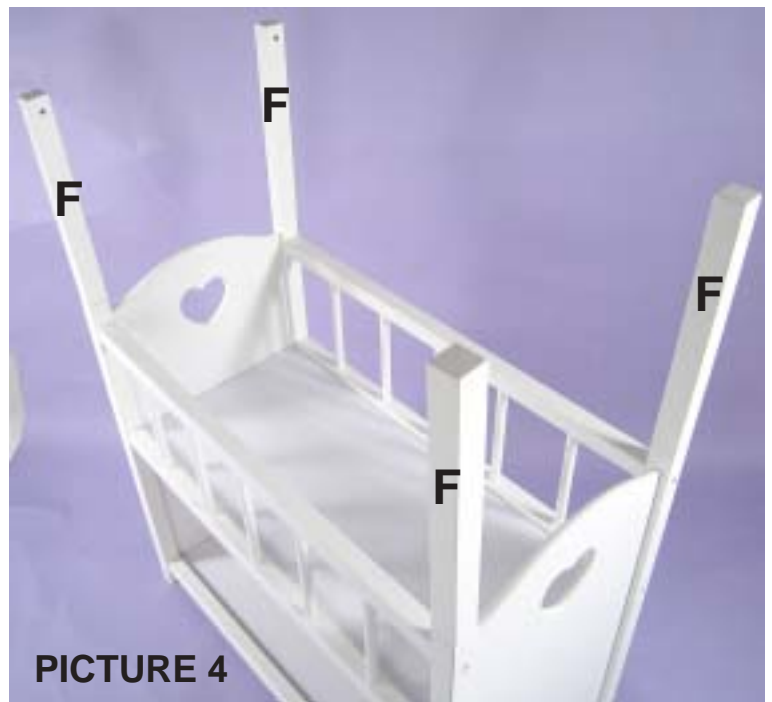

PICTURE 4

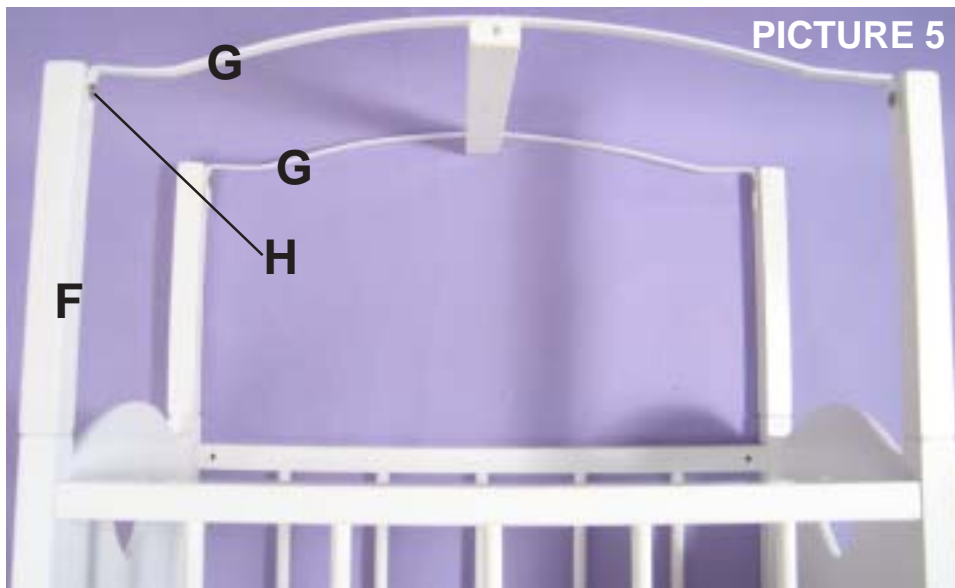

PICTURE 5


STEP 6: See PICTURE 6. Screw the EYE HOOK (I) into the hole in the center of the TOP RAIL (J).

Attach the TOP RAIL (J) to the UNDER-SIDE of the METAL BARS (G) using the TWO SHORT BOLTS (K).

STEP 7: See PICTURE 7. Unfold the MOBILE ARMS (L) so they form a plus (+) sign.

Tie one SHAPE (M) to each corner of the arms. Hang the arms from the hook on the MUSIC BOX (N). Hang the MUSIC BOX (N) on the EYE HOOK (I).


Turn on the mobile by winding it up and sliding the ON/OFF switch to the ON position. It does not require batteries!

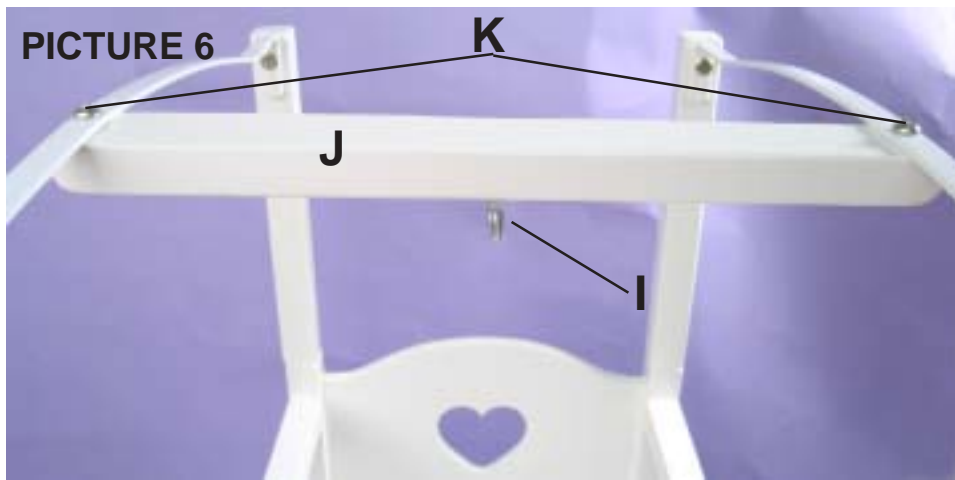

PICTURE 6

STEP 8: See PICTURE 8. Unfold the TWO BASKETS (O). Place the TWO BASKET BOTTOMS (P) inside and push them firmly into the bottoms of the baskets. Place the baskets onto the bottom shelf of the crib.

Put the LINER (Q) inside the crib and tie the ribbons to the corner posts and side rails. Place the CANOPY (R) over the top of the crib and tie the ribbons to the corner posts. The PILLOW (S) and BLANKET (T) add to the fun!

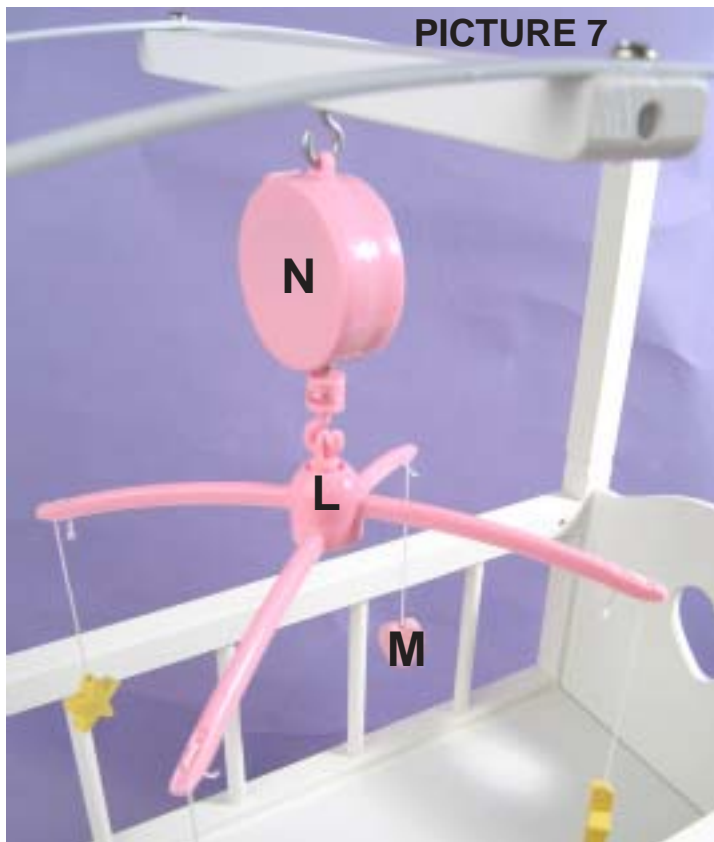

PICTURE 7



PICTURE 8