



# ASSEMBLY INSTRUCTIONS

Adult Assembly Required  
 Save these instructions for future use.  
 This item is a toy for dolls only.  
 For children ages three (3) years and older.


**MODEL #:** 01721

**NAME:** Doll Crib with Cabinet

**TOOLS NEEDED:** Phillips Screwdriver  
*A power screwdriver is helpful but be careful not to strip the screws or damage the product.*


**PARTS INCLUDED:**

- (A) 2 - End Panels
- (B) 1 - Rear Side Panel
- (C) 1 - Front Side Panel w/Door Stop
- (D) 1 - Rear Bottom Rail w/Two Grooves
- (E) 2 - Bottom Platforms (notched corners)\*
- (F) 1 - Back Panel\*
- (G1, G2) 2 - Door Panels
- (H) 1 - Front Bottom Rail w/One Groove
- (I) 4 - Caster Wheels
- (J) 12 - 2" Screws
- (K) 4 - Hinge Pins
- (L) 1 - Lower Mobile Arm
- (M) 1 - Upper Mobile Arm
- (N) 1 - Mobile Music Box
- (O) 1 - Mobile Cross Arms
- (P) 5 - Hanging Mobile Shapes
- (Q) 1 - Fabric Bumper/Liner
- (R) 1 - Fabric Pillow
- (S) 1 - Fabric Blanket

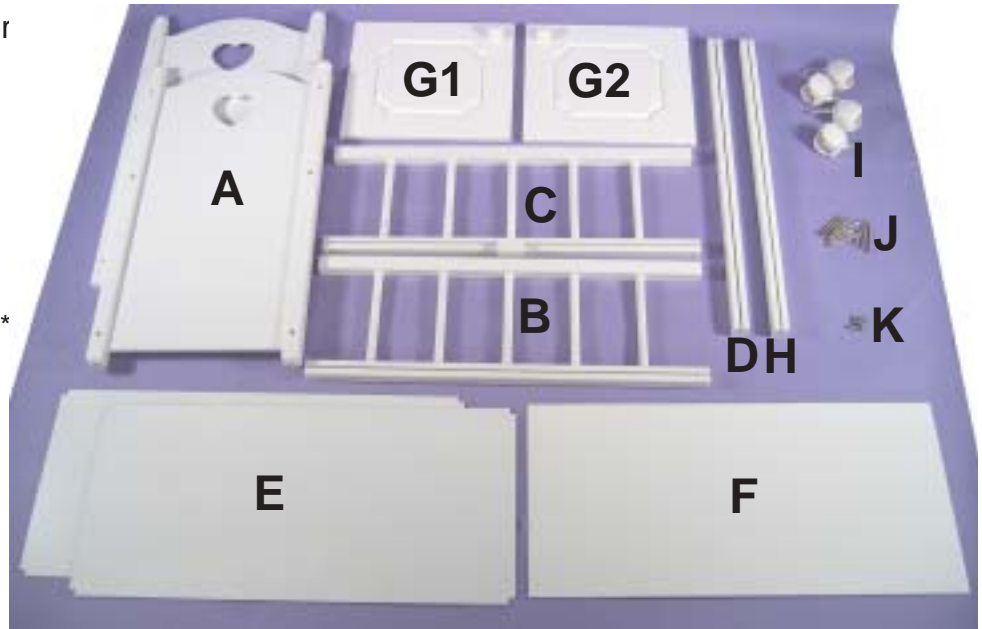

\* NOTE: Any/all of these panels may have holes cut in them. The holes are required by current safety standards and are not a product defect.





**BEFORE YOU BEGIN ASSEMBLY:**  
 Ensure that all the parts and hardware listed above are included. If anything is missing, please do not return the product to the store. E-mail [parts@badgerbasket.com](mailto:parts@badgerbasket.com) for assistance. Also review PARTS A to determine the outside faces, which have countersunk holes so that the screw heads will be flush with the surface after being screwed in.



Visit us online at [www.badgerbasket.com](http://www.badgerbasket.com)

Toll-Free Customer Service: 1-800-236-1310 (Monday through Thursday 7:30 AM to 4:30 PM CST)

[parts@badgerbasket.com](mailto:parts@badgerbasket.com)

**PLANT AND GENERAL OFFICE:** PO Box 227, Edgar, WI 54426-0227 715-352-2311 Fax: 715-352-3163

**CORPORATE OFFICE:** 111 Lions Dr., Suite 220, Barrington, IL 60010

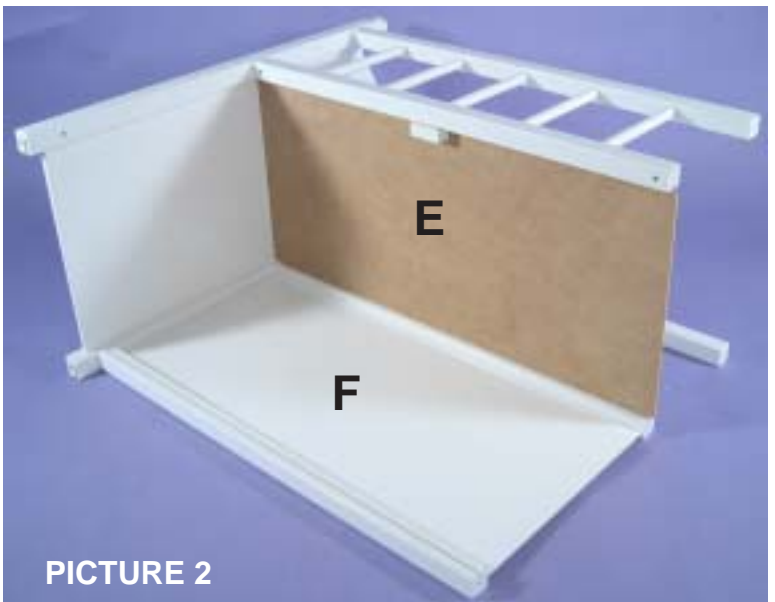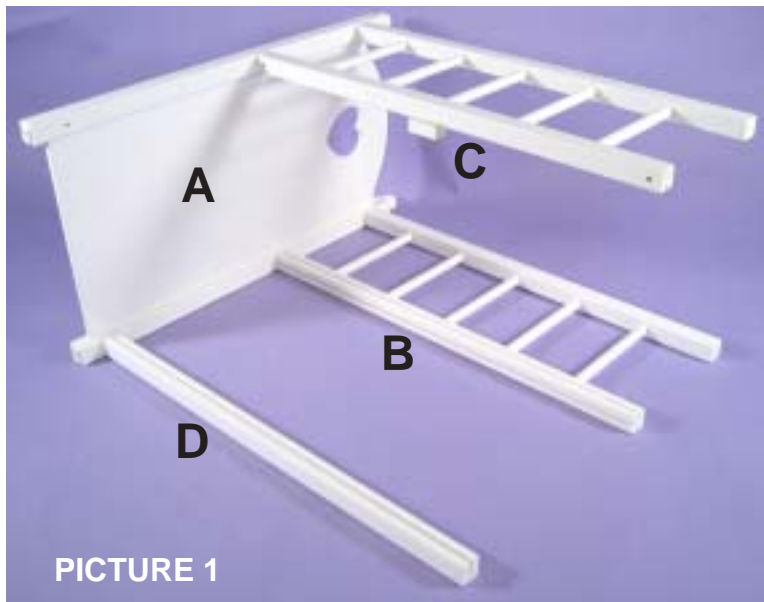


**STEP 1:** See PICTURE 1. Take ONE END PANEL (A) and attach the REAR SIDE PANEL (B) using TWO 2" SCREWS (J). One groove on the lower rail faces down and one faces in. Next attach the FRONT SIDE PANEL (C) using TWO 2" SCREWS (J). The groove on the lower rail faces in and the holes for the hinge pins face down. Then, attach the REAR BOTTOM RAIL (D) to the END PANEL (A) using ONE 2" SCREW (J). One groove on the rail faces in and one faces up.


**STEP 2:** See PICTURE 2. Slide ONE BOTTOM PLATFORM (E) into the grooves on the SIDE PANELS (B, C) with the white side facing up. Slide the BACK PANEL (F) into the grooves on the REAR SIDE PANEL (B) and REAR BOTTOM RAIL (D) with the white side facing in.

**STEP 3:** See PICTURE 3. Take the DOOR PANELS (G1, G2) and insert the FOUR HINGE PINS (K) into the holes on the top and bottom edges. Insert the HINGE PINS (K) on the top edges into the corresponding holes in the FRONT SIDE PANEL (C) and insert the HINGE PINS (K) on the bottom edges into the corresponding holes on the FRONT BOTTOM RAIL (H). Attach the FRONT BOTTOM RAIL (H) to the END PANEL (A) using ONE 2" SCREW (J). The groove on the FRONT BOTTOM RAIL (H) should face in. Next, insert the second BOTTOM PLATFORM (E) into the grooves on the FRONT AND REAR BOTTOM RAILS (D, H).

**STEP 4:** See PICTURE 4. Attached the second END PANEL (A) to all of the side panels and rails using SIX 2" SCREWS (J). Next, stand up the doll crib and insert the FOUR CASTER WHEELS (I) into the holes on the bottom of the TWO END PANELS (A). Press each corner of the crib and the wheels against the floor (gently but firmly) to snap the wheels into place permanently. Or turn the crib upside down, insert the wheels, and gently tap into place with a hammer.

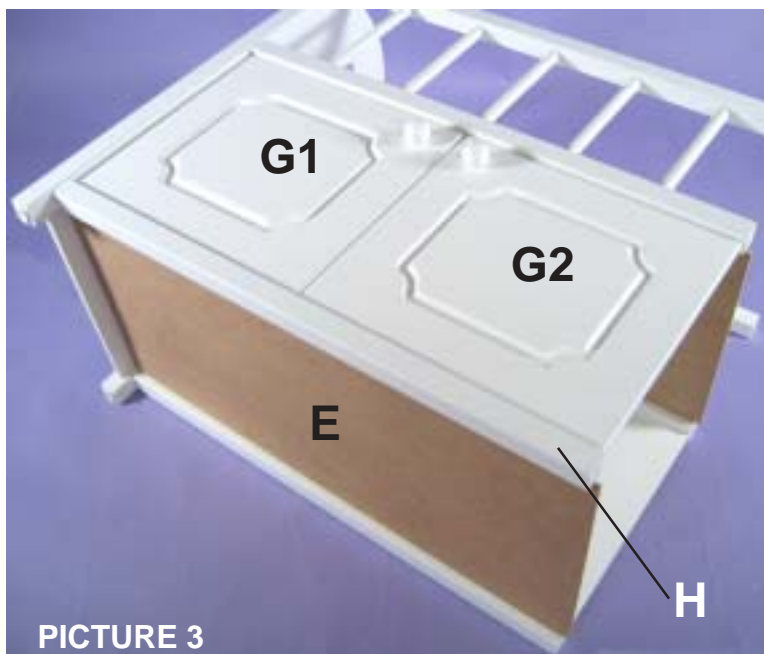

PICTURE 5

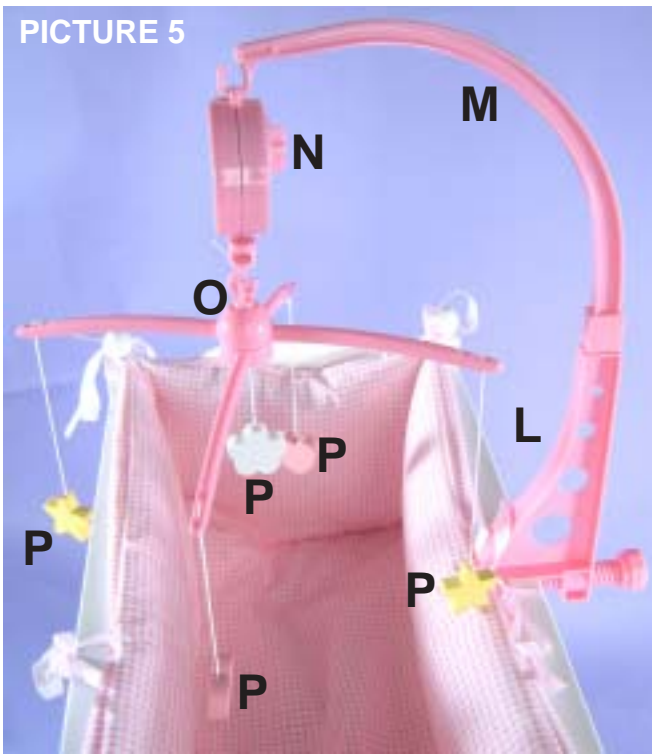

**STEP 5:** See PICTURE 5. Attach the LOWER MOBILE ARM (L) to one of the SIDE PANELS (B or C, either one) by loosening the screw post, positioning the clamp on the rail, and tightening the screw post. Don't overtighten or you may damage the product.

Next, snap the UPPER MOBILE ARM (M) to the LOWER MOBILE ARM (L). Hang the MUSIC BOX (N) on the UPPER MOBILE ARM (M).

Attach the FIVE HANGING MOBILE SHAPES (P) to the ends of the MOBILE CROSS ARMS (O) by inserting the strings through the holes and tying knots in the string after selecting the length you prefer. You can snip off the extra length of the strings with scissors.

Hang the MOBILE CROSS ARMS (O) on the MUSIC BOX (N).

To activate the mobile, wind it up using the dial on the MUSIC BOX (N) and slide the switch to the ON position. The music will play while the mobile arms slowly rotate in a circle just like a real baby mobile! You can stop the music and rotation by sliding the switch back to the OFF position. The music box is powered by winding it up. It does not require any batteries! NOTE: Your mobile may vary slightly from shown.

**STEP 6:** See PICTURE 6. Insert the FABRIC BUMPER/LINER (Q) into the doll crib and smooth it down along the sides and bottom. Tie the ribbons to the corners and side panels.

Your DOLL CRIB AND BED WITH CABINET is now assembled! The FABRIC PILLOW (R) and BLANKET (S) add to the fun!

PICTURE 6



**WARNING !!  
CHOKING HAZARD!  
SMALL PARTS!**

Not for children under three (3) years of age. Please make sure children know that this furniture is for dolls and stuffed animals only.

**It is not to be used with real infants or with pets. Children should NEVER attempt to sit or stand on the crib.**

**CARE INSTRUCTIONS:** Wipe the doll crib and musical mobile clean with a damp cloth and mild soap as needed. The fabric parts are made with poly/cotton fabric. For longevity of the product, we recommend spot cleaning or gently hand washing as needed; however you can machine wash the fabric parts in cold water, gentle cycle and air dry or tumble dry on low if desired.