



**BADGER**  
B A S K E T



# DOLL SWING AND CARRIER - PINK GINGHAM

**Assembly and Use Instructions. Adult assembly Required.**

**Read all instructions before use.**

**This manual is part of the product and  
must be saved for future reference.**



**MODEL NUMBER\*:**  
**01550**

**VERSION CODE\*:**  
**2.0/0514/HF**

*\* Model and Version numbers are needed  
if replacement parts are requested*



**If you need product  
parts, see below or Page 2!**

## **FOR REPLACEMENT PARTS:**

Go to our web site: <http://www.badgerbasket.com/parts>  
Or scan QR code at right with your smartphone



2.0/0514/HF



## BEFORE YOU BEGIN ASSEMBLY:

Check all parts. If anything is missing or not satisfactory, please DO NOT call the store or return the product to them. Please go online to:

<http://www.badgerbasket.com/parts>

Most problems are resolved without you needing to leave home.

When contacting us, please have this instruction manual, your product model number, and your Version Code ready.

**Your Model Number is: 01550**

**Your Version Code is: 2.0/0514/HF**



## WARNING

ADULT ASSEMBLY REQUIRED  
DUE TO THE PRESENCE OF SMALL PARTS AND SHARP  
POINTS DURING ASSEMBLY, KEEP OUT OF REACH OF  
CHILDREN UNTIL ASSEMBLY IS COMPLETE.




## WARNING - CAUTION

**READ ALL INSTRUCTIONS before use of this product.** Use only the parts and hardware provided by Badger Basket. Keep instructions for future use. Do not use the product if it is damaged or broken. Periodically inspect the product to ensure all parts remain tight. **This item is a toy for dolls only. It is never to be used for real infants or pets. No product is a substitute for adult supervision. Always supervise your child during play.** For children ages three (3) years and older. Never sit on or stand on the toy.


### USE AND CARE INSTRUCTIONS:

Wipe metal and plastic parts clean with a damp cloth and mild soap as needed.  
Spot clean fabric as needed.


- PARTS INCLUDED:**
- (A) 2 x PLASTIC BRACKETS
  - (B) 1 x TOP TUBE WITH STRAPS
  - (C) 2 x LEG FRAMES
  - (D) 1 x SWING SEAT/CARRIER SEAT

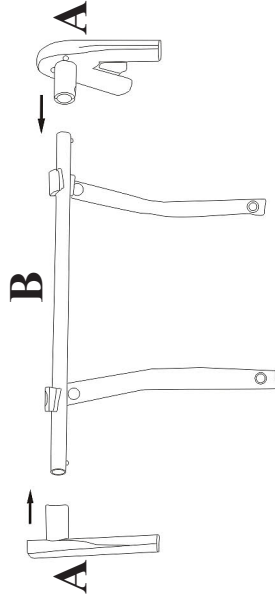


**STEP 1:**  
Fully insert the ends of the TOP TUBE WITH STRAPS (B) into the posts on the PLASTIC BRACKETS (A).

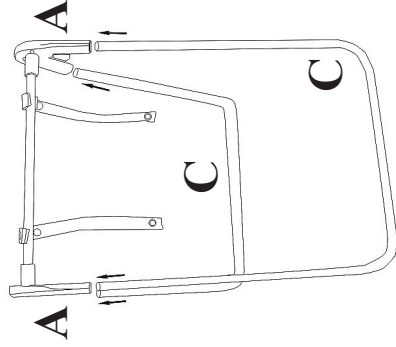

**STEP 2:**  
Insert the LEG FRAMES (C) into the holes on the ends of the PLASTIC BRACKETS (A). Be sure the frames are inserted far enough to be tight and stable.

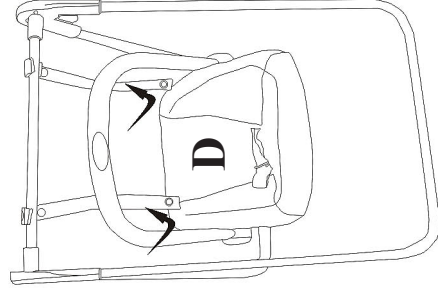

**STEP 3:**  
Wrap the straps on the TOP TUBE (B) around the handle of the SWING SEAT/CARRIER SEAT (D) and secure the straps together.

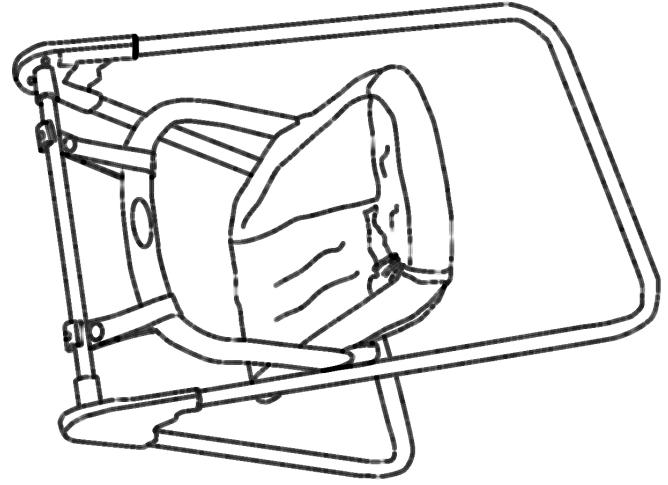


The Swing is now ready for play!  
For use with dolls up to 20 inches (50 cm).

The SEAT can be removed and reattached as needed to convert the item from a swing to carrier seat.

The angle of the seat can be adjusted by grasping the head and foot of the seat and tilting it back and forth to the desired position.

Seat harness can be buckled by threading the free end of the strap through both of the plastic loops (PHOTO 1). Then thread the end of the strap back through only one of the loops and pull tight (PHOTO 2).

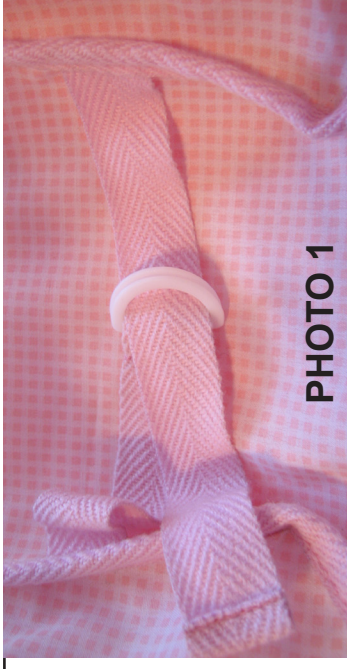

**PHOTO 1**



**PHOTO 2**