



**BADGER**  
B A S K E T



# Folding Double Front-to-Back Doll Stroller - Pink Gingham

**Assembly and Use Instructions. Adult assembly Required.**

**Read all instructions before use.**

**This manual is part of the product and  
must be saved for future reference.**



**MODEL NUMBER\*:**

**09923**

**VERSION CODE\*:**

**3.0/0514/HF**

*\* Model and Version numbers are needed  
if replacement parts are requested*



**If you need product  
parts, see below or Page 2!**

## **FOR REPLACEMENT PARTS:**

Go to our web site: <http://www.badgerbasket.com/parts>  
Or scan QR code at right with your smartphone



3.0/0514/HF



## **BEFORE YOU BEGIN ASSEMBLY:**

Check all parts. If anything is missing or not satisfactory, please **DO NOT** call the store or return the product to them. Please go online to:

**<http://www.badgerbasket.com/parts>**

Most problems are resolved without you needing to leave home.

When contacting us, please have this instruction manual, your product model number, and your Version Code ready.

**Your Model Number is: 09923**

**Your Version Code is: 3.0/0514/HF**



## **WARNING**

**ADULT ASSEMBLY REQUIRED**  
DUE TO THE PRESENCE OF SMALL PARTS AND SHARP POINTS DURING ASSEMBLY, KEEP OUT OF REACH OF CHILDREN UNTIL ASSEMBLY IS COMPLETE.



## **WARNING - CAUTION**

**READ ALL INSTRUCTIONS** before use of this product. Use only the parts and hardware provided by Badger Basket. Keep instructions for future use. Do not use the product if it is damaged or broken. Periodically inspect the product to ensure all parts remain tight. This item is a toy for dolls only. It is never to be used for real infants or pets.

**No product is a substitute for adult supervision. Always supervise your child during play.** For children ages three (3) years and older. Stroller should be folded and unfolded by an adult only. Never use the doll stroller unless the frame locks are properly secured. Folded stroller should be stored out of reach of children.

Never sit on or stand on the toy.

## PARTS AND HARDWARE INCLUDED:

- (A) 1 - Stroller Body/Frame
- (B) 2 - Wheel Axles
- (C) 4 - Wheels
- (D) 1 - Canopy

### CARE INSTRUCTIONS:


Metal parts can be wiped clean with a damp cloth. Fabric parts are polyester/cotton. Spot clean canopy as needed. Seats and basket can be removed for spot cleaning or hand washing and air dry.




## TO ASSEMBLE THE MODEL #09923 DOLL STROLLER:

### STEP 1. SEE PICTURES A, B, AND C.


Unfold the body/frame. Push up on the notched frame buckles on both sides until they lock over the corresponding tabs on the frame. Then latch the frame lock on the side of the stroller over the metal frame post.

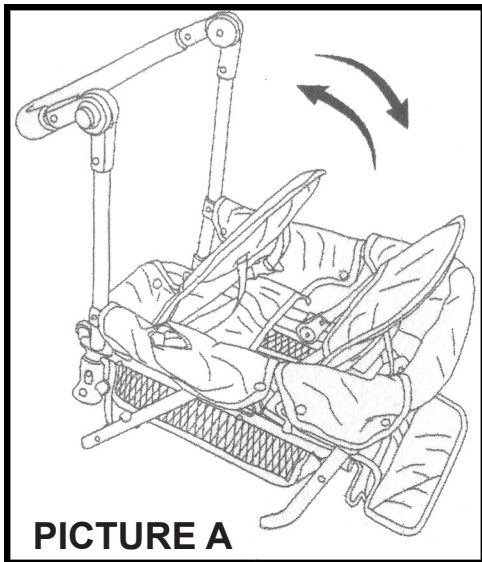

PICTURE A

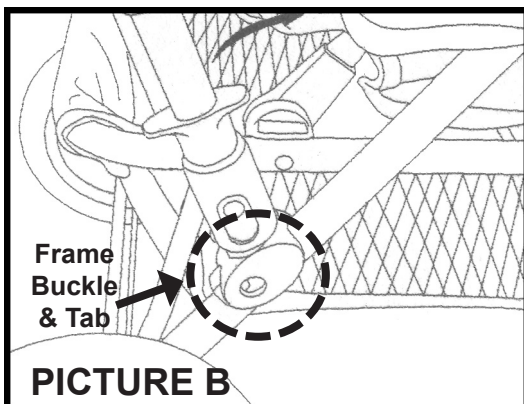


PICTURE B

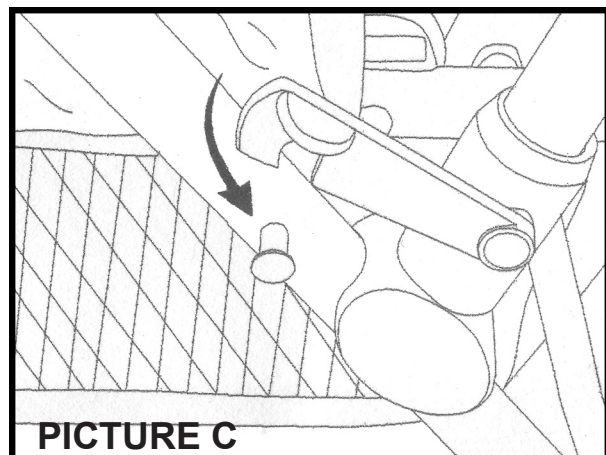

PICTURE C




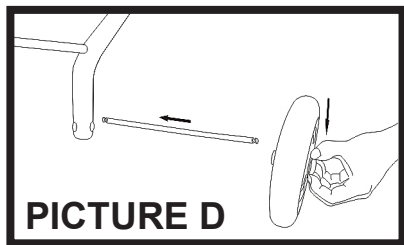

## STEP 2. SEE PICTURE D.

Insert the front and rear axles through the holes on the stroller leg posts.

Snap the wheels onto the axles by squeezing the metal clips on the outside of the wheels, pushing the wheels onto the axles, and then releasing the clips so they lock over the ends of the axles. Gently tug on each wheel to make sure it's locked in place.

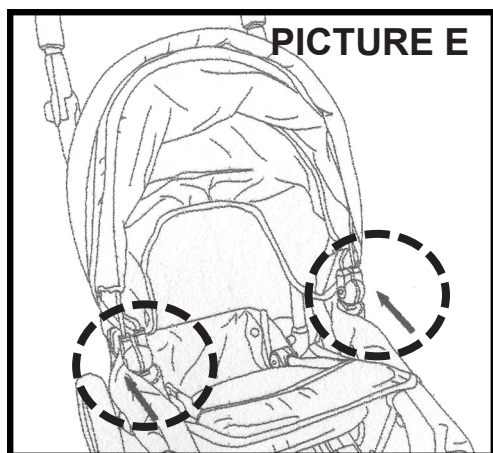


## STEP 3. SEE PICTURE E.

Slide and snap the ends of the canopy connectors into the canopy brackets on the stroller frame.

## STEP 4. SEE PICTURE F.

Adjust the handle height by pressing the buttons on either side and pushing up or down.

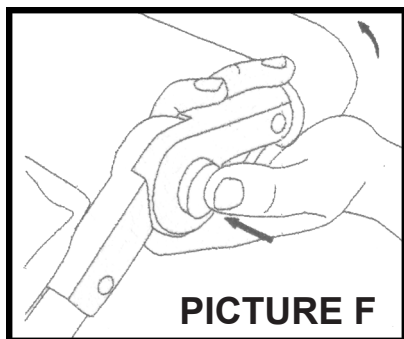

## STEP 5. SEE PICTURE G.

To fold the stroller, unlatch the frame lock from Step 1 and pull up on the frame buckles, then fold the stroller frame forward. When unfolding the stroller, make sure both of these locks are secured to prevent accidental folding during play.

## STEP 6. SEE PICTURE H.

Canopy and seatbacks can be adjusted to your liking anytime before and during play.

