



BADGER
B A S K E T



DOUBLE UMBRELLA DOLL STROLLER - PINK GINGHAM FABRIC

Assembly and Use Instructions. Adult assembly Required.

Read all instructions before use.

**This manual is part of the product and
must be saved for future reference.**



MODEL NUMBER*:

09941

VERSION CODE*:

3.0/0514/HF

** Model and Version numbers are needed
if replacement parts are requested*



**If you need product
parts, see below or Page 2!**

FOR REPLACEMENT PARTS:

Go to our web site: <http://www.badgerbasket.com/parts>
Or scan QR code at right with your smartphone





BEFORE YOU BEGIN ASSEMBLY:

Check all parts. If anything is missing or not satisfactory, please DO NOT call the store or return the product to them. Please go online to:

<http://www.badgerbasket.com/parts>

Most problems are resolved without you needing to leave home.

When contacting us, please have this instruction manual, your product model number, and your Version Code ready.

Your Model Number is: 09941

Your Version Code is: 3.0/0514/HF



WARNING

ADULT ASSEMBLY REQUIRED
DUE TO THE PRESENCE OF SMALL PARTS AND SHARP
POINTS DURING ASSEMBLY, KEEP OUT OF REACH OF
CHILDREN UNTIL ASSEMBLY IS COMPLETE.



WARNING - CAUTION

READ ALL INSTRUCTIONS before use of this product. Use only the parts and hardware provided by Badger Basket. Keep instructions for future use. Do not use the product if it is damaged or broken. Periodically inspect the product to ensure all parts remain tight. This item is a toy for dolls only. It is never to be used for real infants or pets.


No product is a substitute for adult supervision. Always supervise your child during play. For children ages three (3) years and older. Stroller should be folded and unfolded by an adult only. Never use the doll stroller unless the frame locks are properly secured. Folded stroller should be stored out of reach of children.

Never sit on or stand on the toy.


TO OPEN THE STROLLER:

1. Unfold the stroller.
2. See Picture A. Locate the two frame locks (one on each side).
3. See Picture B. Slide the frame locks down and over the metal frame posts.
4. To fold the stroller, reverse this procedure.

PICTURE A

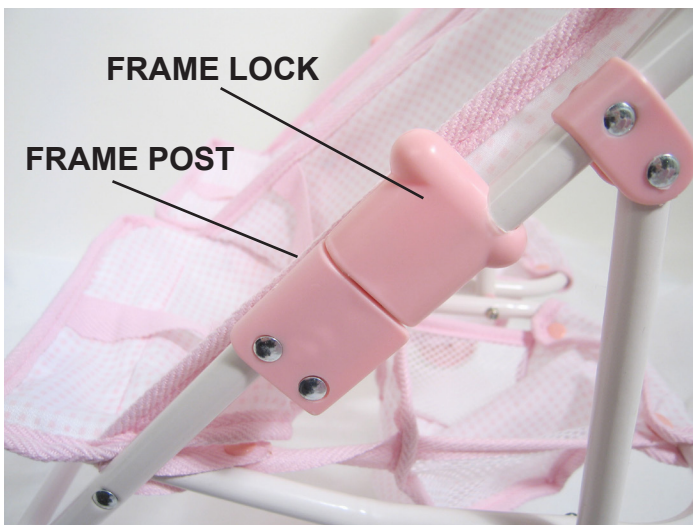

PICTURE B

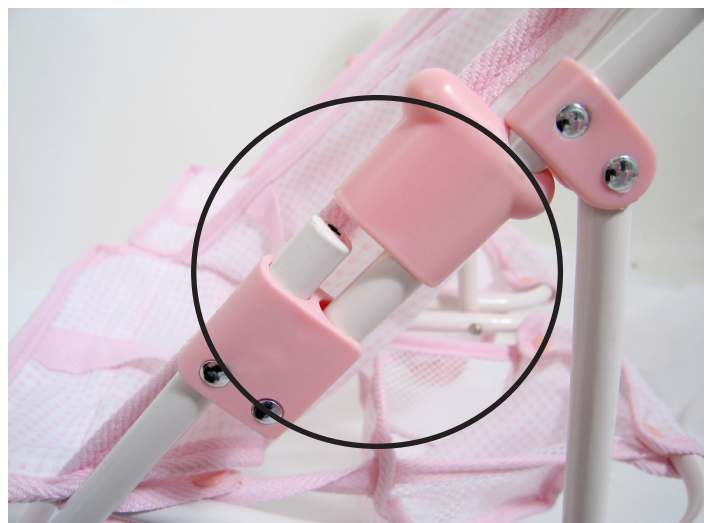

CARE INSTRUCTIONS:

Wipe the metal and plastic parts clean with a damp cloth and mild soap as needed.

Gently spot clean fabric as needed with mild detergent.

The seat and basket fabrics are removable and can be hand washed
and air dried if desired.

To prolong the life of the product and preserve the appearance,
we do not recommend machine washing.