



BADGER
B A S K E T



THREE WHEEL DOLL JOGGING STROLLER - PINK GINGHAM

**Assembly and Use Instructions. Adult assembly
Required. Read all instructions before use.
This manual is part of the product and must be
saved for future reference.**



MODEL NUMBER*:

09960

VERSION CODE*:

3.0/0514/HF

** Model and Version numbers are needed
if replacement parts are requested*

CARE INSTRUCTIONS:

Wipe metal and plastic parts clean
with a damp cloth and mild soap.
Spot clean the fabric parts with
water and mild detergent.

Badger Basket Company, PO Box 227, Edgar, WI 54426-0227 USA • **Web:** www.badgerbasket.com
Toll-Free (Mon-Thurs 7:00 AM-4:00 PM CST): 1-800-236-1310
Phone: 715-352-2311 • **Fax:** 715-352-3163

FOR REPLACEMENT PARTS:

Go to our web site: <http://www.badgerbasket.com/parts>
Or scan QR code at right with your smartphone



3.0/0514/HF



BEFORE YOU BEGIN ASSEMBLY:

Check all parts. If anything is missing or not satisfactory, please DO NOT call the store or return the product to them.

Please go online to:

<http://www.badgerbasket.com/parts>

Most problems are resolved without you needing to leave home.

When contacting us, please have this instruction manual, your product model number, and your Version Code ready.

Your Model Number is: 09960

Your Version Code is: 3.0/0514/HF



WARNING

ADULT ASSEMBLY REQUIRED
DUE TO THE PRESENCE OF SMALL PARTS AND SHARP
POINTS DURING ASSEMBLY, KEEP OUT OF REACH OF
CHILDREN UNTIL ASSEMBLY IS COMPLETE.



WARNING - CAUTION

READ ALL INSTRUCTIONS before use of this product. Use only the parts and hardware provided by Badger Basket. Keep instructions for future use. Do not use the product if

it is damaged or broken. Periodically inspect the product to ensure all parts remain tight.

This item is a toy for dolls only. It is never to be used for real infants or pets. **No product is a substitute for adult supervision. Always supervise your child during play.** For children ages three (3) years and older. Stroller should be folded and unfolded by an adult only. Never use the doll stroller unless the frame locks are properly secured. Folded stroller should be stored out of reach of children. Never sit on or stand on the toy.

PARTS & HARDWARE INCLUDED:

Ax1 - STROLLER FRAME

Bx1 - SHORT AXLE

Cx1 - FRONT WHEEL

Dx2 - FRONT SPACER


Ex2 - CAPS

Fx2 - BUMPERS

Gx1 - LONG AXLE

Hx2 - REAR SPACER

Ix2 - REAR WHEELS (with metal clips)

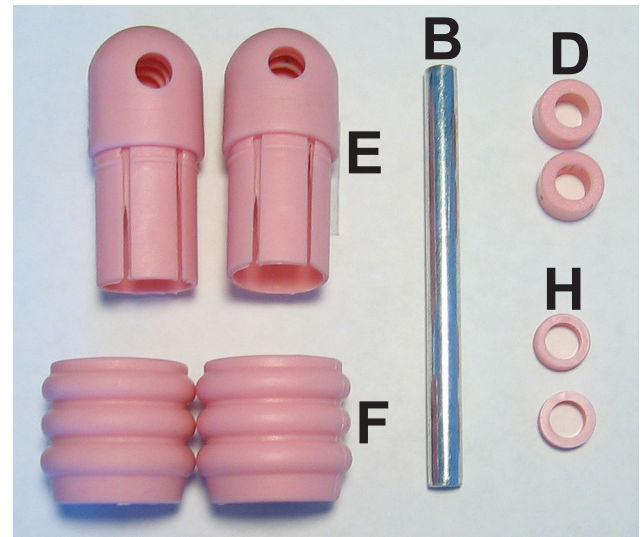

STEP 1: Unfold the STROLLER FRAME (A) making sure the locks on both sides snap together.

STEP 2: Insert the SHORT AXLE (B) through the FRONT WHEEL (C), and add one FRONT SPACER (D) and one CAP (E) to each side.




STEPS 3 & 4: Slip the BUMPERS (F) onto the two front axle posts (note the proper position below!). Push the CAPS (E) onto the front posts as far as they will go. Push the BUMPERS (F) onto the CAPS (E). The parts “snap” and lock together when properly connected.

STEP 5: Insert the LONG AXLE (G) through the rear posts of the stroller frame. Add one SPACER (H) to each end of the axle; then snap the REAR WHEELS (I) on (squeeze the latch open, slide the wheel onto the axle, and release the latch). Gently tug the wheels to ensure they are connected properly.

STEP 6: Adjust the height of the handle by pressing the buttons on either side.

STEP 7: Lock the safety latches.

STEP 8: Fold the stroller by releasing the safety latch and pulling up on the two frame buckles located on both sides of the stroller seat.

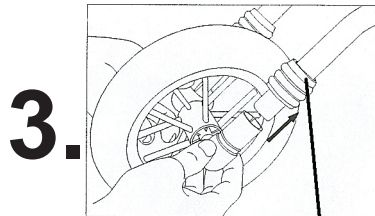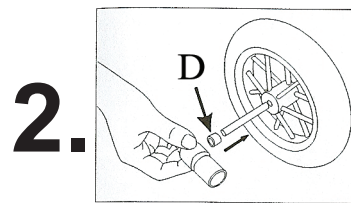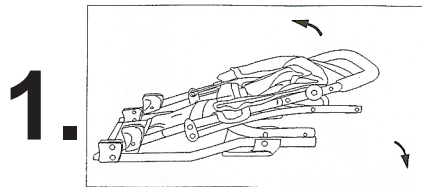

Wider ridge/rim of the
BUMPER placed at the top.

