

Kitchen Furniture Set for 18 inch Dolls

Assembly and Use Instructions. Adult Assembly Required. Read all instructions before use. <u>This manual is part of the product</u> <u>and must be saved for future reference.</u>

MODEL NUMBER*: 12025 -Gray/White

VERSION CODE*: 2.0/1018/TG

* Model and Version numbers are needed if replacement parts are requested




Find us on **F** • **D** YouTube • O

Assembly Videos available on YouTube

FOR REPLACEMENT PARTS: http://www.badgerbasket.com/parts

Badger Basket®, PO Box 227, Edgar, WI 54426-0227 USA • Web: www.badgerbasket.com U.S. Based Customer Service Toll-Free (Mon-Thurs 7:00 AM-4:00 PM CST): 1-800-236-1310 Phone: 715-352-2311 • Fax: 715-352-3163

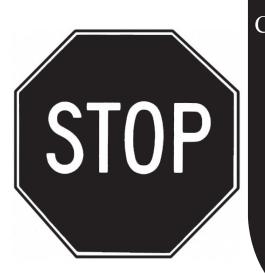

BEFORE YOU BEGIN ASSEMBLY: Check all parts and hardware. If anything is missing or not satisfactory, please DO NOT call the store or return the product to them. Please go online to: http://www.badgerbasket.com/parts Most problems are resolved without you needing to leave home. When emailing or calling us, please have this instruction manual, your product model number, and your Version Code ready. Your Model Number is: 12025 Your Version Code is: 2.0/1018/TG

CARE INSTRUCTIONS:

Wooden pieces can be wiped clean with a damp cloth and mild soap and dry thoroughly. Periodically inspect the product to ensure all the parts remain tight.



WARNING

ADULT ASSEMBLY REQUIRED. DUE TO THE PRESENCE OF SMALL PARTS AND SHARP POINTS DURING ASSEMBLY, KEEP OUT OF REACH OF CHILDREN UNTIL ASSEMBLY IS COMPLETE.






WARNING - CAUTION


READ ALL INSTRUCTIONS before use of this product. Use only the parts provided by Badger Basket®. Keep instructions for future use.


Do not use the product if it is damaged or broken. Periodically inspect the product to ensure all parts remain tight. This item is a toy for dolls only. It is never to be used for real infants or pets. No product is a substitute for adult supervision. Always supervise your child during play. For children ages three (3) years and older. Never sit on or stand on the toy.




ASSEMBLY TIPS! Review the entire manual before beginning. Leave hardware slightly loose during assembly and then go back and tighten fully at the end. If using a power screwdriver, keep torque setting low and go slow to prevent damage to the product.

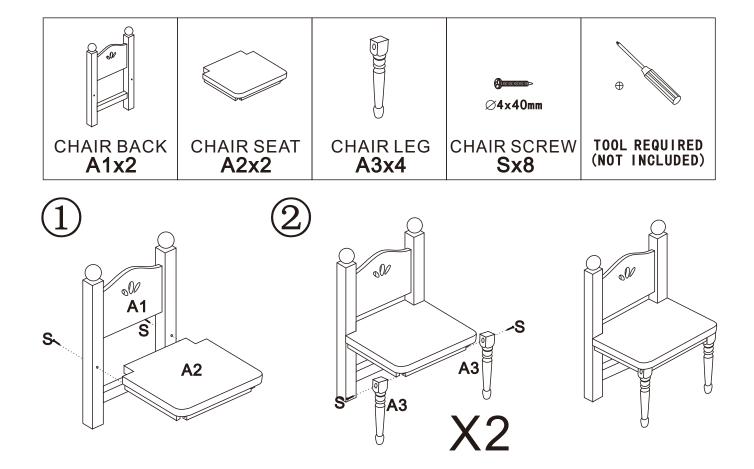


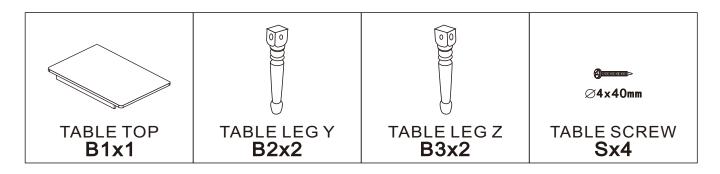


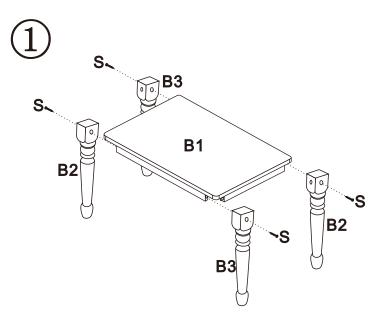





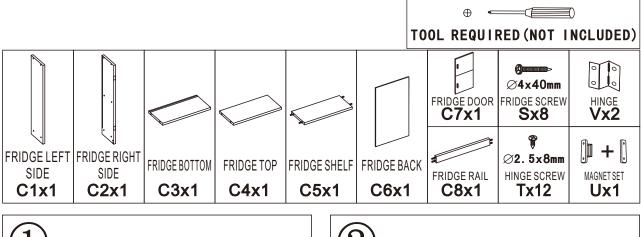


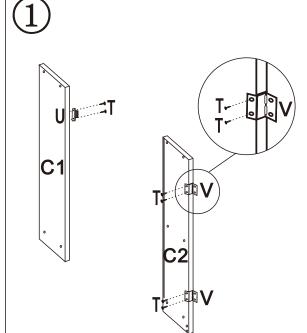


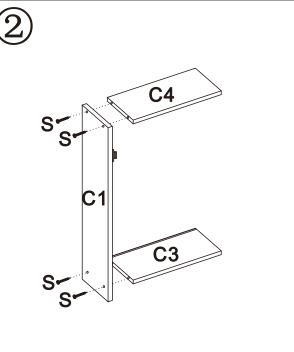

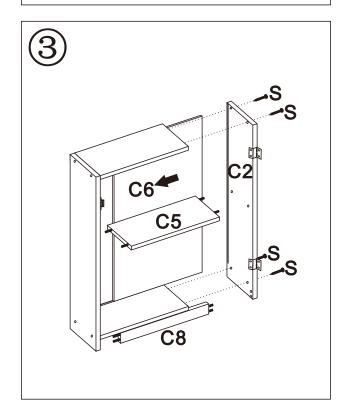

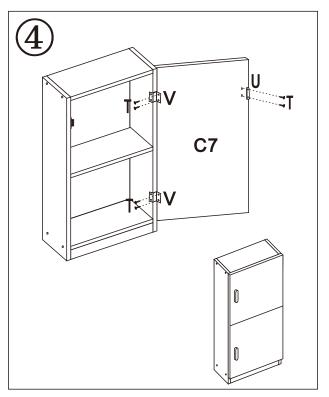

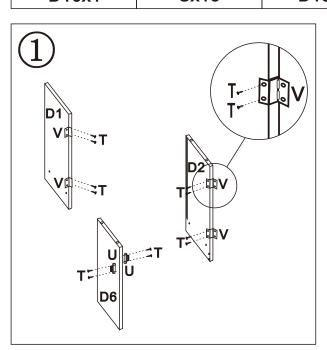

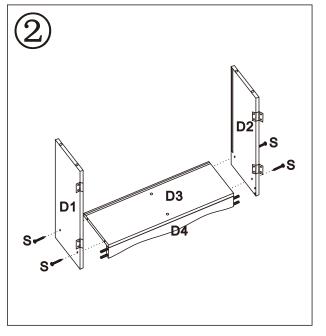

COUNTER LOWER LEFT	COUNTER LOWER RIGHT	COUNTER BOTTOM D3x1	COUNTER RAIL D4x1	COUNTER LOWER BACK D5x1
		•••		The second secon
COUNTER DIVIDER D6x1	COUNTER UPPER LEFT	COUNTER UPPER RIGHT D8x1	COUNTER UPPER BACK D9x1	COUNTER SHELF D10x1
1000		B	000	
COUNTER TRIM D11x1	COUNTER TOP D12x1	FAUCET D13x1	OVEN DOOR D14x1	CABINET DOOR D15x1
	@ <u></u> > ⊘4x40mm	₽ Ø 2. 5×8mm HINGE SCREW Tx24	MAGNET SET Ux2	CLOCK D22x1
SINK D16x1	COUNTER LONG SCREW	Ø4×14mm COUNTER SHORT SCREW D19×2	III HINGE Vx4	Ø Ø4x25mm COUNTER FAUCET SCREW D23x1

